


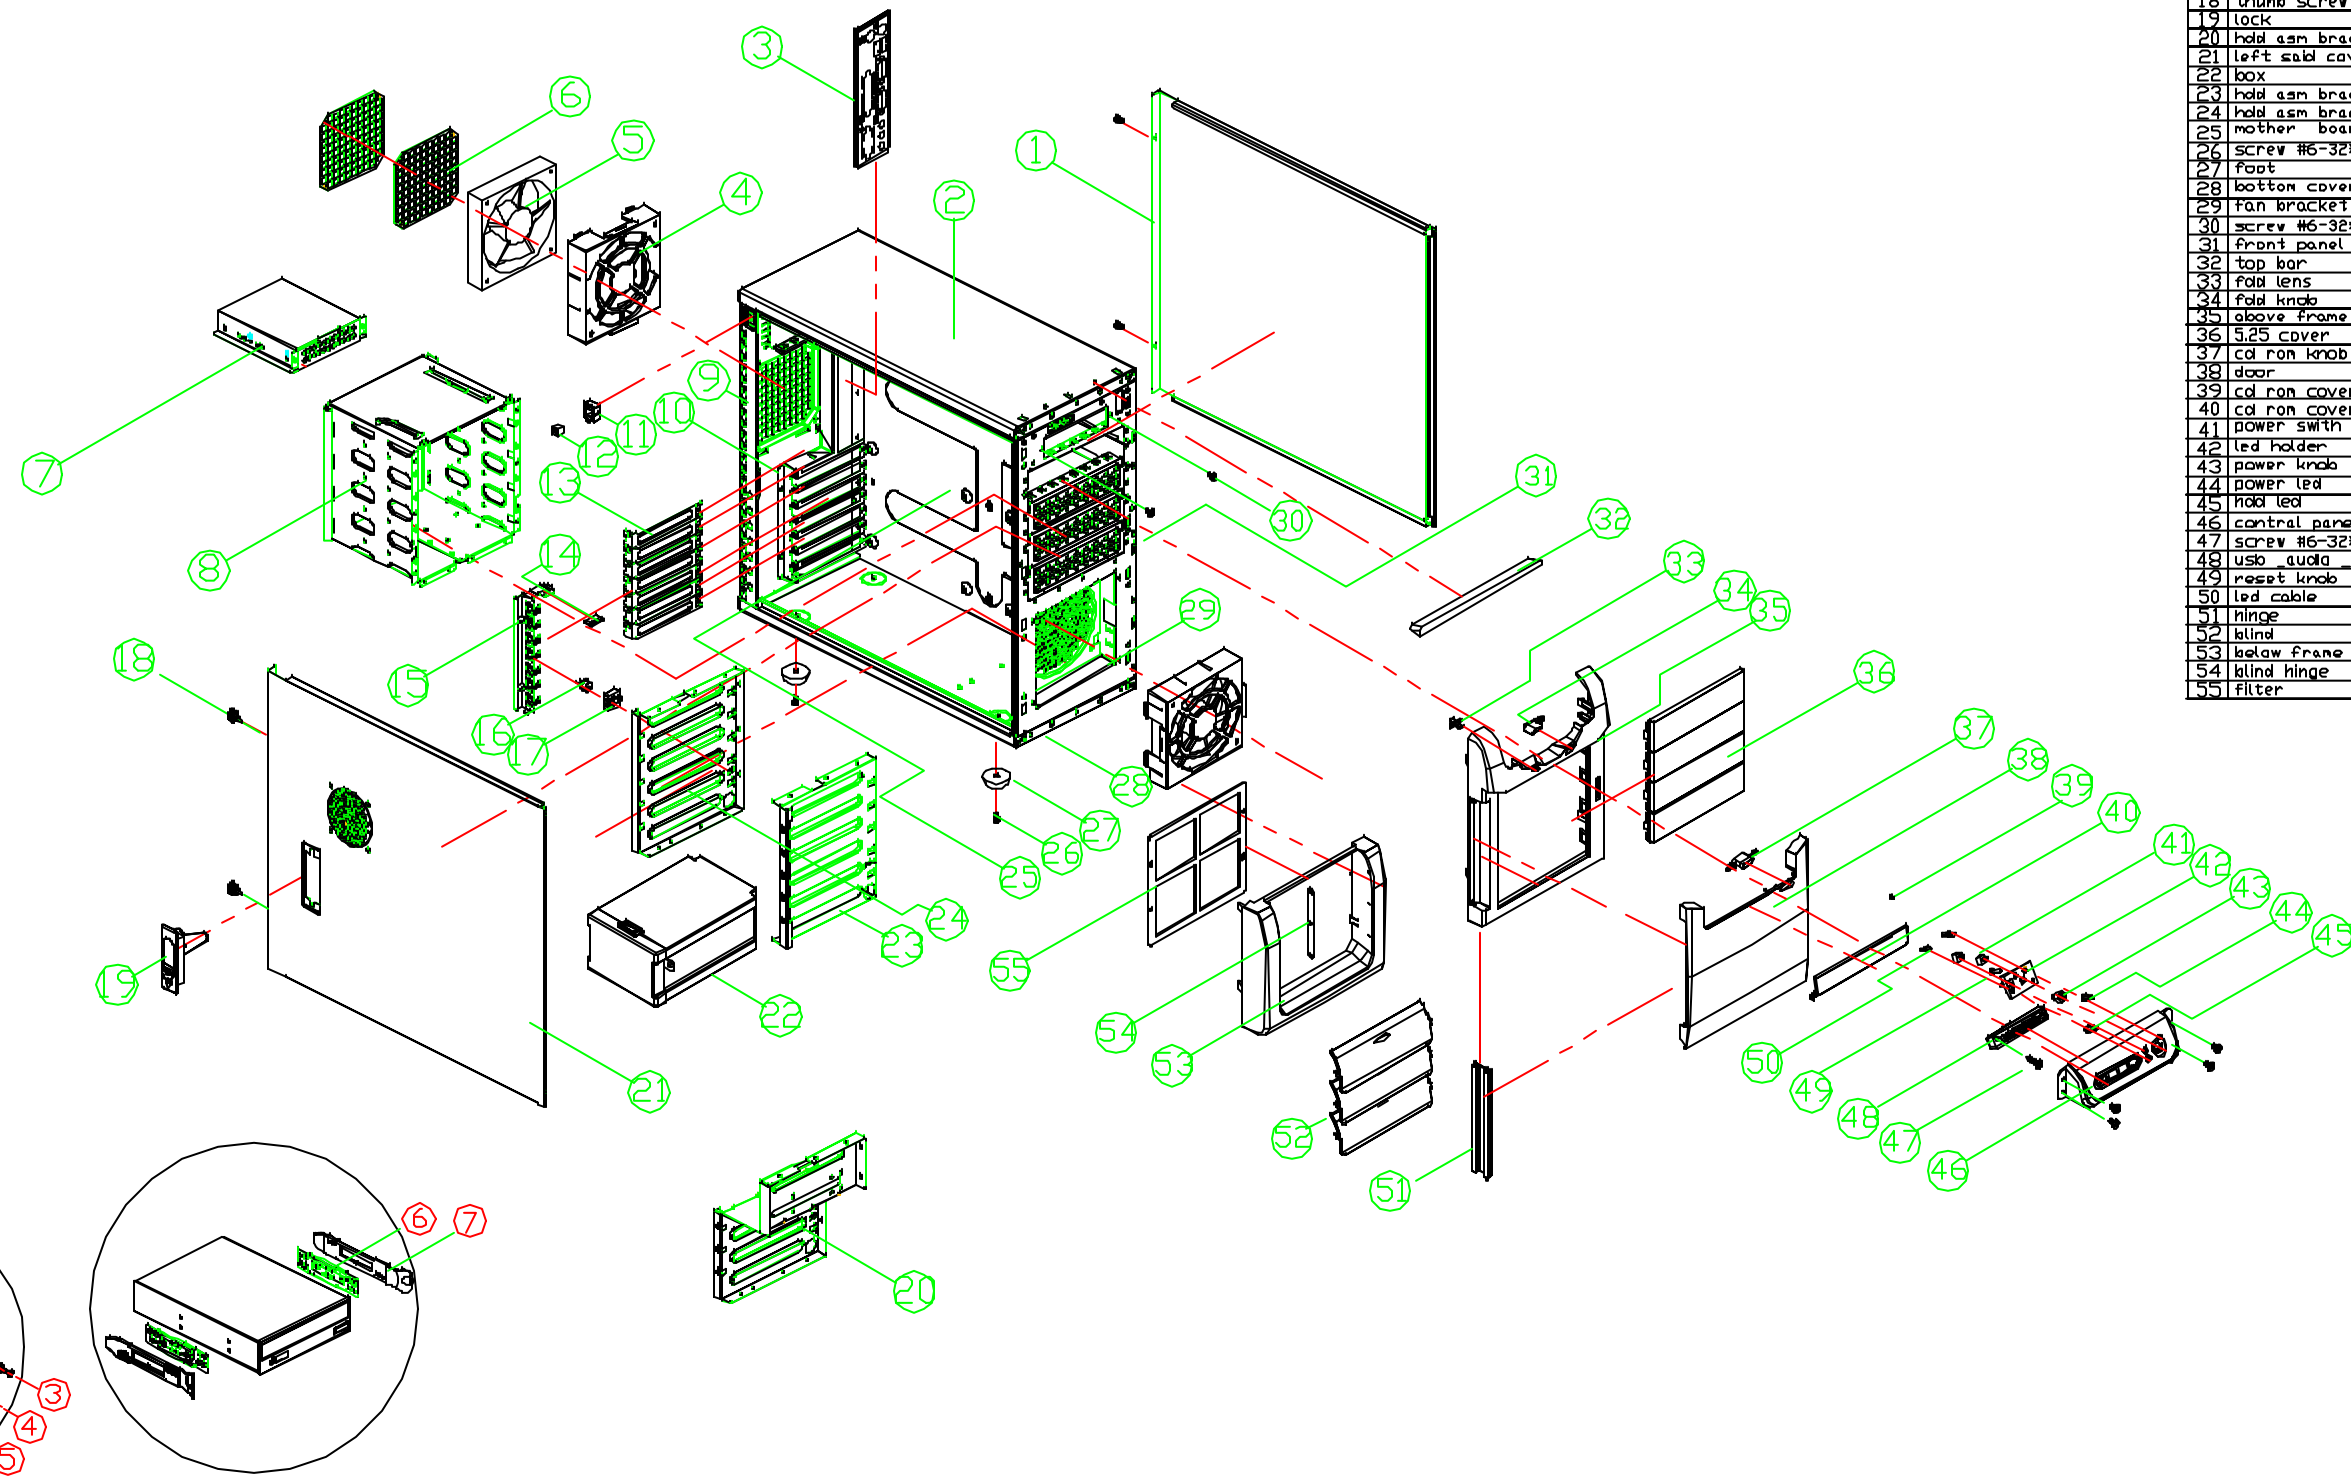

Item	Part Name	QTY	Remark
1	right side cover	1	1202-56082-A
2	top cover	1	1201-56081-A
3	i/o shield	1	0226-00001-B
4	fan holder	2	0323-56011-A
5	120mm fan	2	0612-00501-A
6	wave guide	2	0219-54121-A
7	Fdd bracket	1	0203-56081-A
8	cd bracket	1	0206-56081-A
9	back panel	1	0222-56081-A
10	i/o window	1	0209-54081-B
11	switch holder	1	0503-00301-A
12	switch btn power	1	0503-00301-A
13	slot bracket	7	0207-A2061-A
14	finger	1	0331-56011-A
15	batten	1	0207-56061-A
16	buzzer holder	1	0316-00001-A
17	buzzer	1	0503-00301-A
18	thumb screw	2	5401-47061-A
19	lock	1	0503-00301-A
20	hold asm bracket option	1	0503-00301-A
21	left side cover	1	1202-56081-A
22	box	1	0334-56011-A
23	hold asm bracket left	1	0205-56082-A
24	hold asm bracket right	1	0205-56083-A
25	mother board bracket	1	0208-56081-A
26	screw #6-32x6L	4	5401-55061-A
27	foot	4	5703-00002-A
28	bottom cover	1	1201-56082-A
29	fan bracket	1	0211-56081-A
30	screw #6-32x5L	6	5401-54051-A
31	front panel	1	0225-56081-A
32	top bar	1	0319-56011-A
33	fold lens	1	0306-56011-A
34	fold knob	1	0304-56011-A
35	above frame	1	0301-56011-A
36	5.25 cover	4	0311-56011-A
37	cd rom knob	1	0304-56012-A
38	door	1	0208-56011-A
39	cd rom cover spring	1	5407-11031-A
40	cd rom cover	1	5401-55061-A
41	power swith	1	0401-00701-A
42	led holder	1	0313-56011-A
43	power knob	1	0303-56011-A
44	power led	1	0306-56012-A
45	hold led	1	0306-54912-A
46	control panel	1	0301-56013-A
47	screw #6-32x16	2	5401-32121-A
48	usb audio 1394	1	0503-00301-A
49	reset knob	1	0305-56011-A
50	led cable	1	0403-00701-A
51	hinge	1	0318-56011-A
52	blind	3	0323-56011-A
53	below frame	1	0301-56012-A
54	blind hinge	1	0318-56012-A
55	filter	1	1201-56082-A

Item	Part Name	QTY	Remark
1	FINGERSTALL	10	0331-56012-A
2	BUBBER	20	0384-A2001-A
3	SCREW_T	20	5401-43092-A
4	HDD SLIDE	10	0214-56081-A
5	ScrewM3x3.4	20	5401-23341-A
6	CDR SLID BRACKET	8	5401-43092-A
7	CDR SLIDE	8	0332-56011-A